

## Operating Instructions for the Justrite Plunger Dispensing Canister (Plunger Can)

### Description of the plunger can:

The Justrite plunger dispensing can (plunger can) allows for **safe and economical handling of solvent-based cleaners** (GS approved, FM approved, with flame arrester).

### Important benefit of use:

Cleaning cloths can be moistened quickly and easily with one hand while the other hand holds the workpiece.


### Filling the plunger can:

Dasher pan, riser and inner piston (pump mechanism) form a unit. Unlock the pump mechanism by turning the cover to the left (counterclockwise) and lift it from the container.

Fill the can to about  $\frac{3}{4}$ .

Set the pump mechanism back in place and **firmly tighten** it by turning it to the right (clockwise). If it is difficult to move, take a pencil or a square wooden stick and carefully use it as shown in the sketch.

It is also possible to fill the plunger can by pressing down the dasher pan.

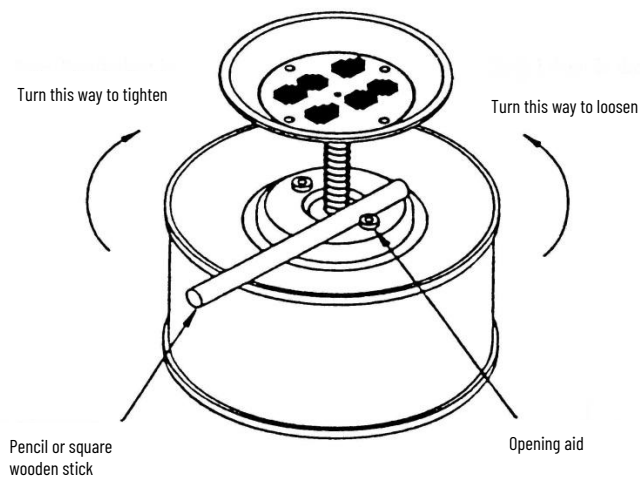

### Cleaning the plunger can:

Take out the pump mechanism as described above, press down the dasher pan and rinse with liquid flow. The pan can be unscrewed and flushed separately. Empty the container and carefully wipe out any dirt residue.

### Attention:

Do not use any highly corrosive fluids or solvents and solvent-based liquids which could react with tinfoil or brass.

Handling at the workplace in accordance with the respective applicable legal and official regulations, in particular the regulations for handling highly flammable liquids.

The plunger can is suitable for all cleaners from the OSTERMANN range.